

PIANO flex



1. SCORING

Place the Piano Flex in the rest position and score the tile using the Lampo Cut Evo (Art. 11101/2).



2. OPENING THE PIANO FLEX

Open the Piano Flex and, using the Lampo System, align the cutting line with the junction between the Multi Bench and the Piano Flex.




3. LOCK UP

Use the locking clips to maximize the pressure exerted by the operator on the tile.



4. PUSHING AND BREAKING

Push downward, placing your hands beyond the crossing of the brackets: the slab will split along the score line and remain locked in place by the clips.

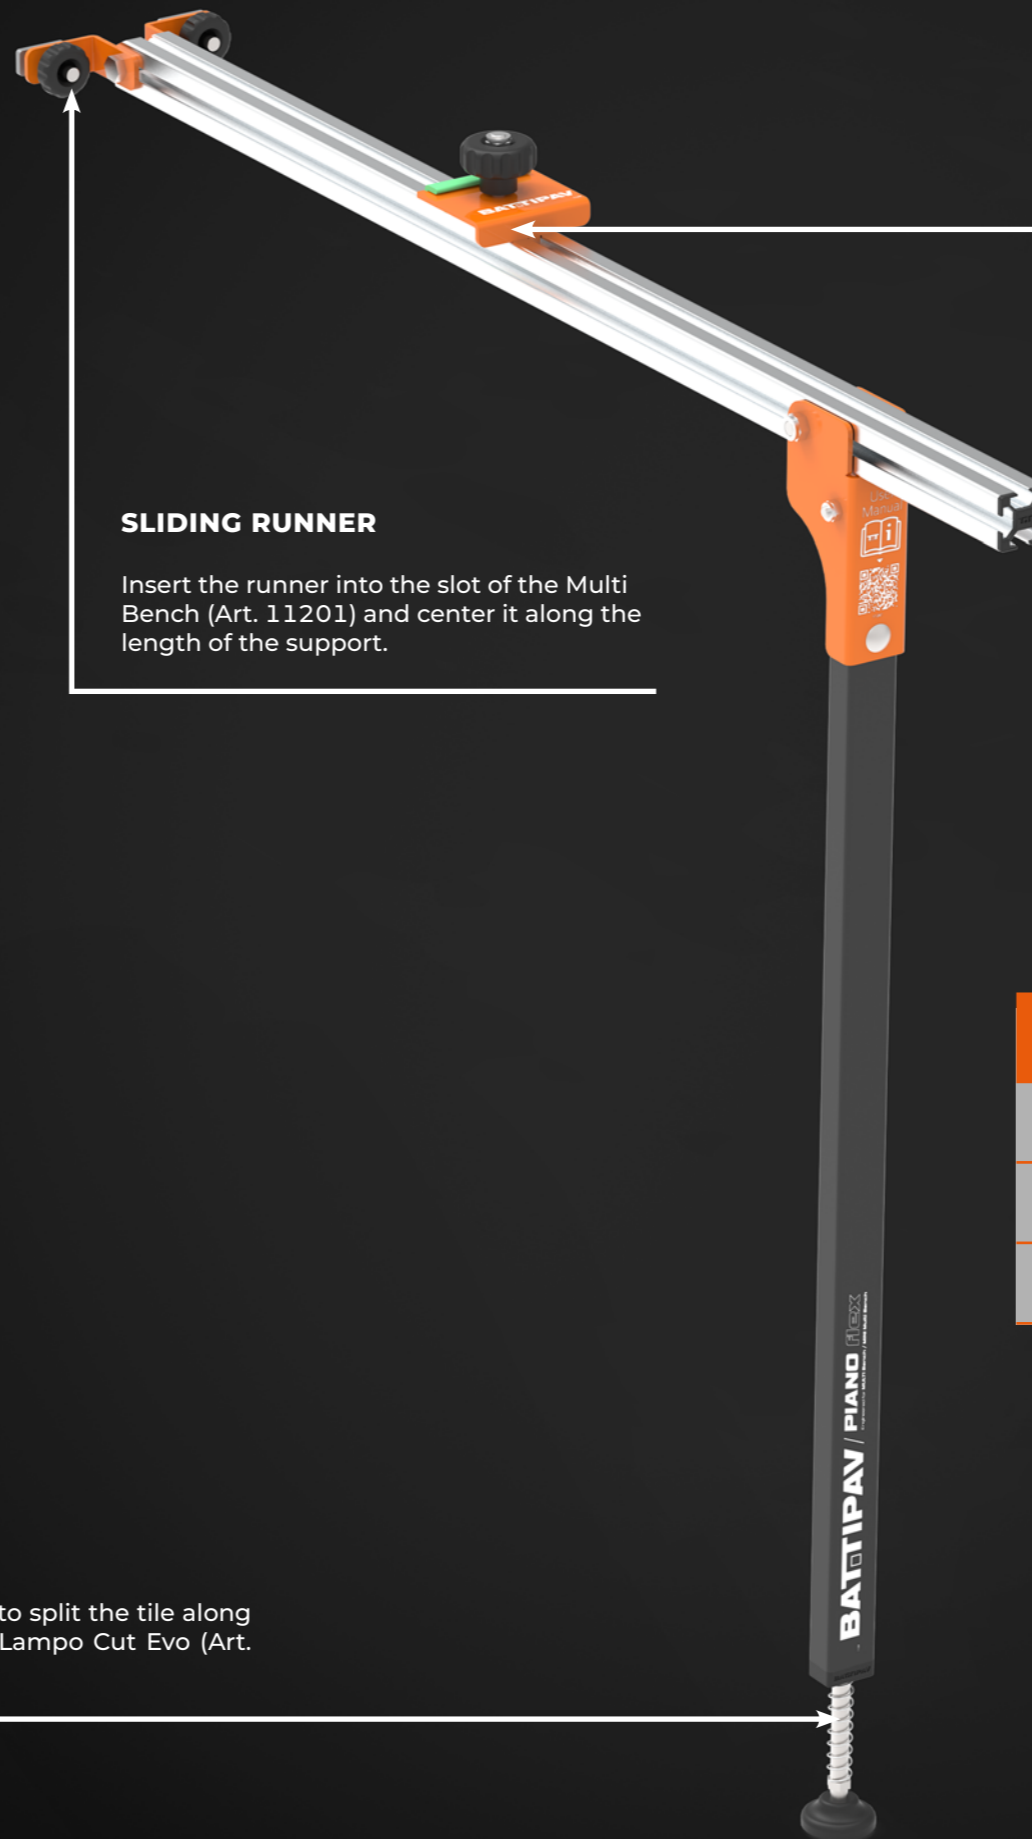

LOCKING CLIP

Support designed to lock the tile in place and optimize splitting.

SLIDING RUNNER

Insert the runner into the slot of the Multi Bench (Art. 11201) and center it along the length of the support.

COMPRESSION SPRING

It applies the necessary stress to split the tile along the score line made with the Lampo Cut Evo (Art. 11101/2).

PIANO FLEX (Art. 11210)	
WEIGHT	4,2 kg
PACKAGING DIMENSION	15 x 102 x 14,5 cm
PIECES FOR PALLET	70 pcs